

# WARNING!

1. **WARNING!** Operation of this air gun for competition use is restricted to users of 18 years of age or older.
2. **WARNING!** Always wear eye protective gear.  
When shooting the air gun for a target or game, you and all participants must wear goggles or other eye protective gear. (Pay sufficient attention also to third personnel other than participants.)
3. **WARNING!** Never disassemble or modify the air gun.  
This air gun is manufactured under consideration of appropriate performance and operability. Disassemble or modifying the gun may generate danger or adversely affect the performance. So, avoid disassembling or modifying the air gun.
4. **WARNING!** Store this product at suitable place where children cannot reach.  
Always attach the protective plug to the muzzle, remove the battery and store the air gun in a case or bag and at a place out of reach by children so that they will not be injured during mischievous play.
5. **WARNING!** This product is only for shooting “**DEEP FIRE**” sponge ball.
6. **WARNING!** You may be punished if you are shooting for a practical joke.  
You may be punished if you damage public or personal properties or injure a person or animal even if you are shooting for a practical joke. Always observe manners and enjoy healthy sport shooting.
7. **WARNING!** Never shoot the air gun towards a person or animal.  
Never aim or shoot a person or animal as the target. Always attach the protective plug to the muzzle, except when you are ready to shoot a target.
8. **WARNING!** Never look into the gun muzzle.  
Looking into the muzzle is extremely dangerous, regardless of with or without bullets being installed. If a BB bullet and sponge ball hits your eye, you may, in the worst case, lose your sight.
9. **WARNING!** Avoid pulling the trigger carelessly.  
Activating the trigger carelessly is extremely dangerous. Never put your finger onto the trigger unless the protective plug is removed and you are ready to shoot a target.
10. **WARNING!** Always direct the muzzle towards a safe direction.  
Never direct the muzzle towards a person, animal or other dangerous directions. Always attach the protective plug, except when you are ready to shoot a target.
11. **WARNING!** Never shoot the air gun at places where people and cars pass cross.  
Select a safe place for operating the air gun, avoiding places where people and cars pass cross or third persons are around.
12. **WARNING!** Always put the gun in a case or bag when you are carrying it.  
When you carry the air gun, attach the protective plug, set the selector lever to the Safety position and put it in a case or bag.
13. **WARNING!** BB bullets may be shot out even if the magazine is removed.  
There are cases that bullets remain in the gun after the BB bullet is disconnected. Pulling the trigger carelessly is extremely dangerous. After removal of the BB bullet, direct the muzzle towards a safe direction and pull the trigger to confirm that no bullets remain in the gun. Then, attach the protective plug to the muzzle.
14. “**DEEP FIRE**” has the final explanation on any dispute regarding the content of this user manual.